
# User Manual C1 Wearable WiFi Camera



### CookyCam

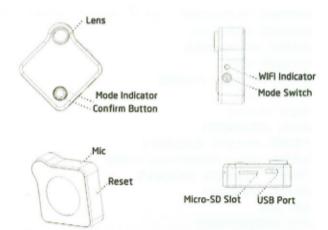

### At Beginning

- Insert a Micro SD Card, Class6 or above (Maximum 32GB).
- Full charging the camera for around 2hours until Mode indicator turns off.
- Power on: Long press Confirm button for 3 seconds, Initialization time is about 25 seconds, Red &Blue Mode indicator flashes continuously when initialization and Red indicator turn on when its finished.
- Press Mode Switch once to change Working Mode (Video/Photo/Motion Sensor)
- 5. Power off: press Confirm button for 3seconds

## **Basic Operation**

Click "Mode Switch" Button to Change Working Mode.

1. Video Mode - Red Mode Indicator keeps on

Press Confirm button once, red Mode indicator turns off, the camera starts to record video.

Press Confirm button again to save video file, red Mode indicator keeps on, the camera is in Video Recording Standby mode.

- 2. Photo Mode Blue Mode indicator keeps on
- Press Confirm button once, the camera takes photo every 15 seconds (blue mode indicator flashes once).
- Motion Detection Red & Blue Mode indicator keeps on When the camera detects object moving, Red & Blue Mode indicator turns off and starts to take video.

4. Charging and Working Modes

Red indicator keeps on while charging; the light turns off after full charging.

Connect the camera to different USB ports, the working modes shows as follows:

- O Connect to computer USB port to charge: can read data but can't shoot.
- O Connect to power bank, car charger or socket USB port to charge: long press Confirm button for 3 seconds while charging, the camera turns on with same functions as normal.

### AP Connection (LAN)



Scan the QR Code to download App

Connect your smart phone Wi-Fi to the Camera.

- Power on: Press Confirm Button for 3seconds and wait initialization finished.
- 2. Connect Mobile: Open WLAN, choose CookyCam, enter password 12345678(default)
- 3. Open APP: Click the LAN and camera ID number, use smart phone to control the camera.

Through the APP, you can preview image, controlling the camera and download files.

In camera setting, you can set the camera to more modes.







### Remote IP Connection (WAN)

To control and watch the real-time video via Internet.

- 1. Power on: Press Confirm Button for 3seconds and wait initialization finished.
- 2. Connect Mobile: Open WLAN, choose CookyCam, enter password 123456(default)
- 3. Open APP: Click the LAN and click for more setting.





- 4. Find Wi-Fi Setting, type in local Wi-Fi name and password.
- 5. The Camera will reboot after successfully setting Remote IP Connection, Wi-Fi indicator flashes slowly. Click WAN enter ID Number and Password 123456(default) to Login. Use the smart phone to control camera and watch the real-time video.

Warning: Please Change the password after login!!

### Specifications

Video Resolution: HD 1280x720P Photo Resolution: 1280x720 IPG File Format: .MP4 (H.264 Coded)

Sensor Type: CMOS

View Angle: 90 Optical first person view angle

Focus: 0.5 - ∞ IOS: 50 - 6400

Mic: Built in noise canceling microphone External Storage: Micro SD Card, Max. 32GB System: Windows XP / Mac OS 10.2 or above Remote Control: AP & Remote IP Connection

Dimension: 40x40x15mm

Weights: 32g


Battery: Built-in 600mAh

#### ウェアラブル Wi-Fi カメラ 操作説明書

#### 製品紹介



#### 各機能紹介

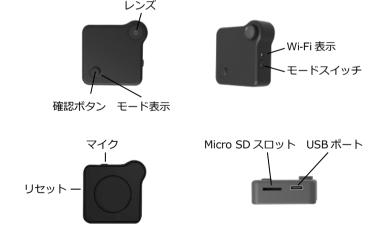

#### はじめに

- Class6 またはそれ以上の Micro SD カードを挿入します。 (最大容量 32GB)
- 2. モード表示が消えるまでカメラをフル充電してください。(約2時間)
- 3. 電源を ON にするには、約3 秒間確認ボタンを押してください。25 秒 程度で初期化されます。初期化中は赤ならびに青のモード表示が連続的 に点滅し、初期化が終了すると赤い表示のみ点灯します。
- 4. モードスイッチを一度押し、動作モードを変更してください。 (録画/撮影/モーションセンサー)
- 5. 電源を OFF にするには、確認ボタンを約3秒間押してください。

#### 基本操作

動作モードを変更するには、モードスイッチを押してください。

- 1. ビデオモード(赤モード表示が点灯) 確認ボタンを一度押し、赤モード表示が消えると録画が始まります。再 度確認ボタンを押すと、録画したファイルが保存され、赤モード表示が 点灯。カメラは録画スタンバイモードになります。
- 撮影モード(青モード表示が点灯)
   確認ボタンを一度押すと、15 秒ごとに写真を撮影します。
   (青モード表示が一度点灯)
- 3. モーションディテクター(赤ならびに青モード表示両方点灯) カメラが物体の動作を検知すると赤ならびに青モード表示が消え、その 時点から録画が始まります。
- 4. 充電ならびに動作モード 充電中は赤モード表示が点灯し、充電が完了するとライトが消えます。 また、カメラを異なる USB ポートに接続すると、可能な操作は以下の とおり異なります。
  - ■パソコンに接続:データ読込みのみ可能
  - ■カーチャージャー、ソケットに接続:充電中に約3秒間確認ボタンを押すと、カメラが起動し、通常どおりにご使用できます。

#### アプリ AP 接続(LAN)

QR コードをスキャンし、アプリをダウンロードしてください。 ご利用のスマートフォンの Wi-Fi をカメラに接続してください。

- 1. 電源 ON:約3秒間確認ボタンを押し、初期化が終わるまでお待ちください。
- 2. モバイルに接続: WLAN を開き、CookyCam を選択、パスワード(初期値: 12345678)を入力してください。
- 3. アプリを開く: LAN とカメラ ID をクリックし、スマートフォンでカメラの操作を行ってください。アプリを介してご使用いただくと、画像のプレビュー、カメラ操作、ファイルのダウンロードが出来ます。

カメラの設定にて、より詳細なモード設定ができます。

#### リモート IP 接続(WAN)

インターネット上でのライブ動画操作ならびに視聴方法

- 1. 電源 ON:約3秒間確認ボタンを押し、初期化が終わるまでお待ちください。
- 2. モバイルに接続: WLAN を開き、CookyCam を選択、パスワード(初期値: 12345678)を入力してください。
- 3. アプリを開く:LAN をクリックし、詳細設定をデバイスの設定画面より おこなってください。
- 4. Wi-Fi 接続設定より、ご利用のWi-Fi 名とパスワードを入力してください。
- 5. リモート IP 接続が問題なく完了するとカメラは再起動し、Wi-Fi 表示が ゆっくりと点滅します。WAN をクリックし、ID ならびにパスワード(初 期値:12345678)を入力し、ログインしてください。

カメラ操作はスマートフォンを利用し、ライブ動画をご視聴いただけます。

【ご注意】パスワードはログイン後に必ず変更してください。

#### 什様

ビデオ解像度: HD 1280×720P 画像解像度: 1280×720JPG ファイルフォーマット: MP4(H264 コード)

センサータイプ: CMOS 視野角: 90° フォーカス: 0.5~∞ IOS: 50~6400

マイク (内蔵): ノイズキャンセルマイク

外部記憶装置:Micro SD Card (最大容量 32GB)対応 OS:Windows XP / Mac OS10.2 以降リモート操作:AP ならびにリモート IP 接続

本体サイズ: 40x40x15mm

重量: 32g 電池 (内蔵): 600mAh